






Polycom IP Lifter Accessory

- 1 Follow the normal installation instructions for the HL10

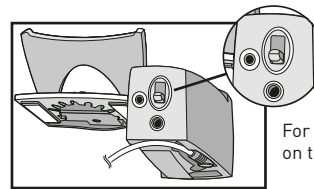


For best results select the lowest position on the height adjust switch as shown

- 2 Before removing the tape, slide the handset cradle attachment onto the phone and position it so that the handset rests in place as shown below.

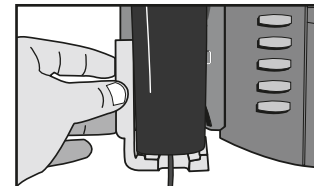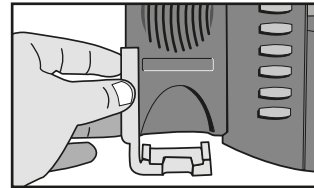


front


- 3 Once you have determined the right position for the handset cradle attachment peel off the tape & repeat the positioning, when located in the correct position press down lightly.

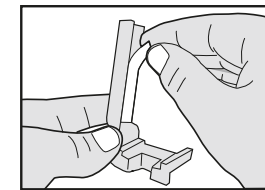

- 4 Confirm the position and test that the handset lifter operates reliably, if located correctly press down firmly on the cradle to secure it.

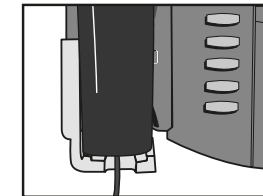

Top view

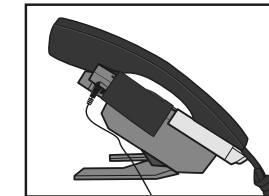

Side view

back